


DM-60


INSTALL INSTRUCTION

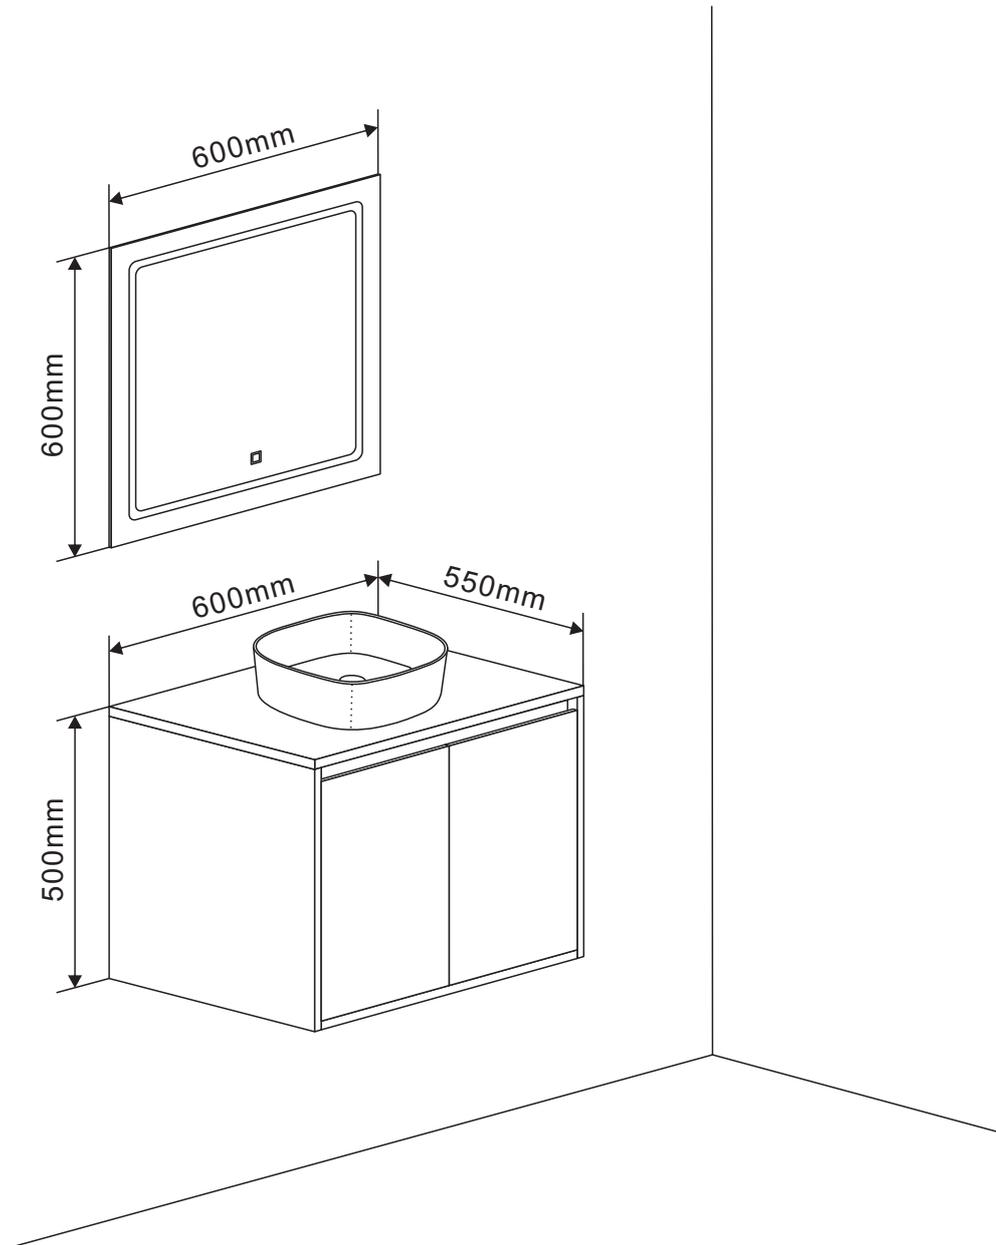

TOOLS REQUIRED

when you're ready to start. Make sure that you have the following tools to hand, plenty of space and a clean dry area for assembly.


Two people are needed. Please note: although these instructions are comprehensive, we always recommend that a technically competent installer should undertake installation.

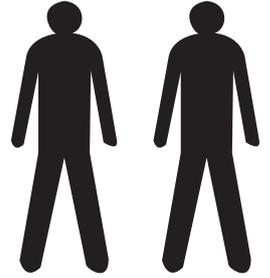


Drill bit head 10mm




Drill bit head 8mm

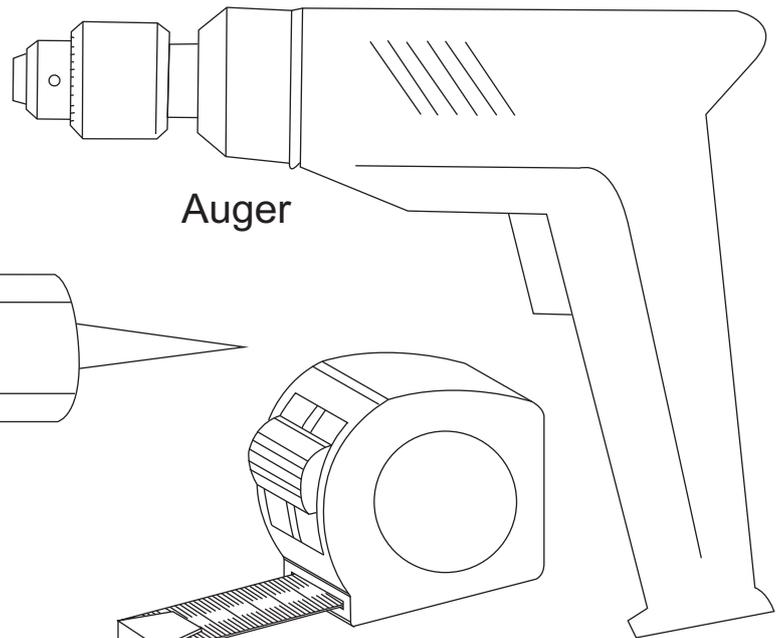


Auger

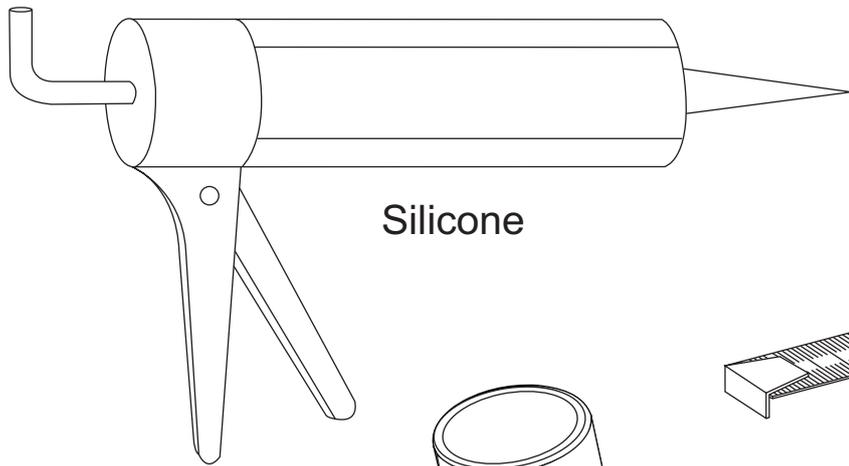


Silicone

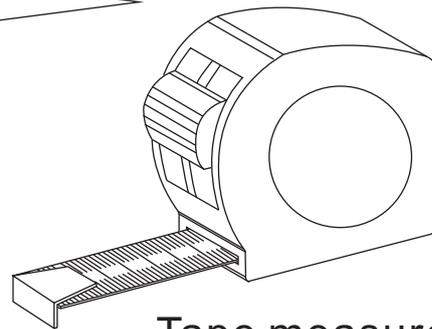

Tape measure

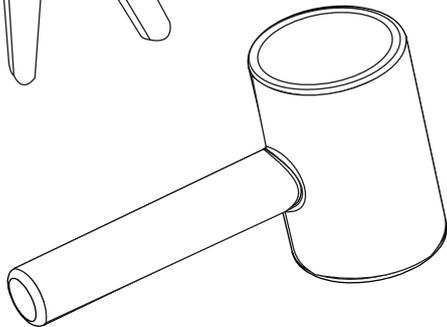


Rubber Mallet

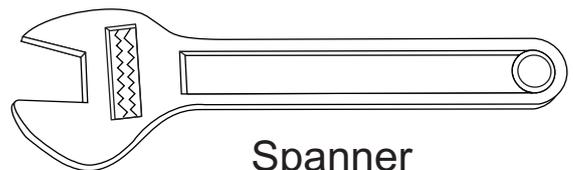


Spanner



Pencil





Magnetic crosshead screwdriver

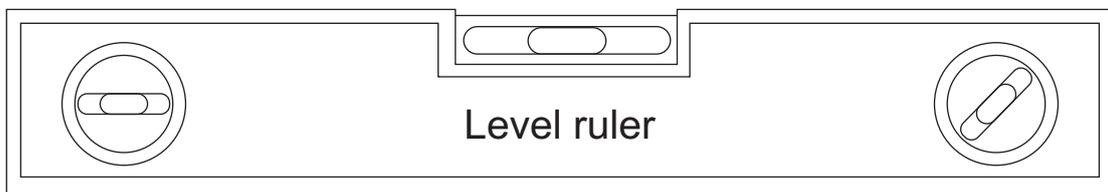


Level ruler


Cabinet

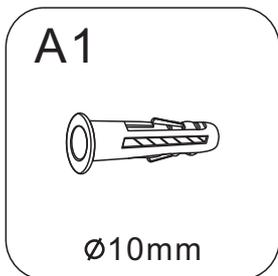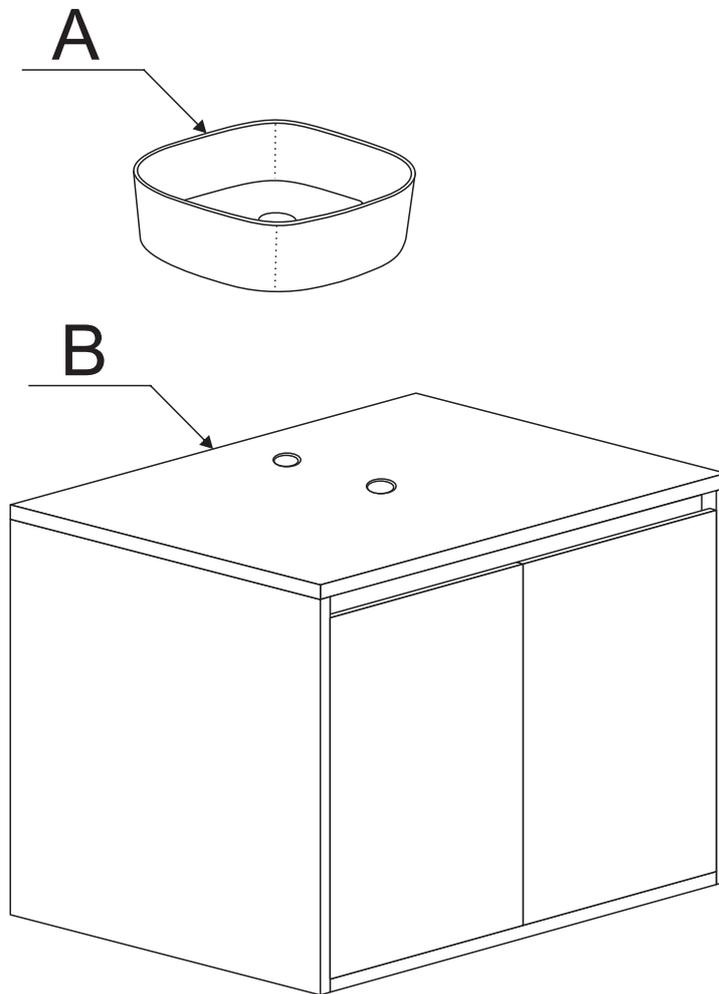


PCS4

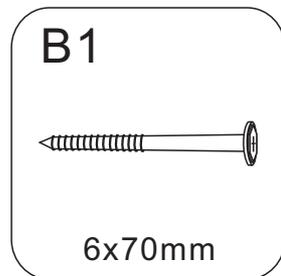

PCS4

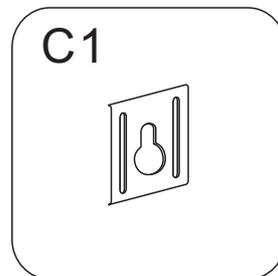


PCS4

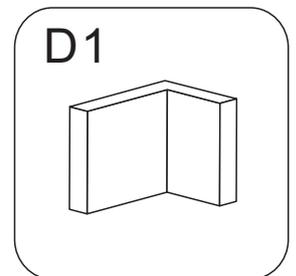


PCS4



Choose a place you want to install the furniture, mark on the wall with a pencil according to the length and height of the furniture. Then drill holes on the wall with $\Phi 10\text{mm}$ drilling.

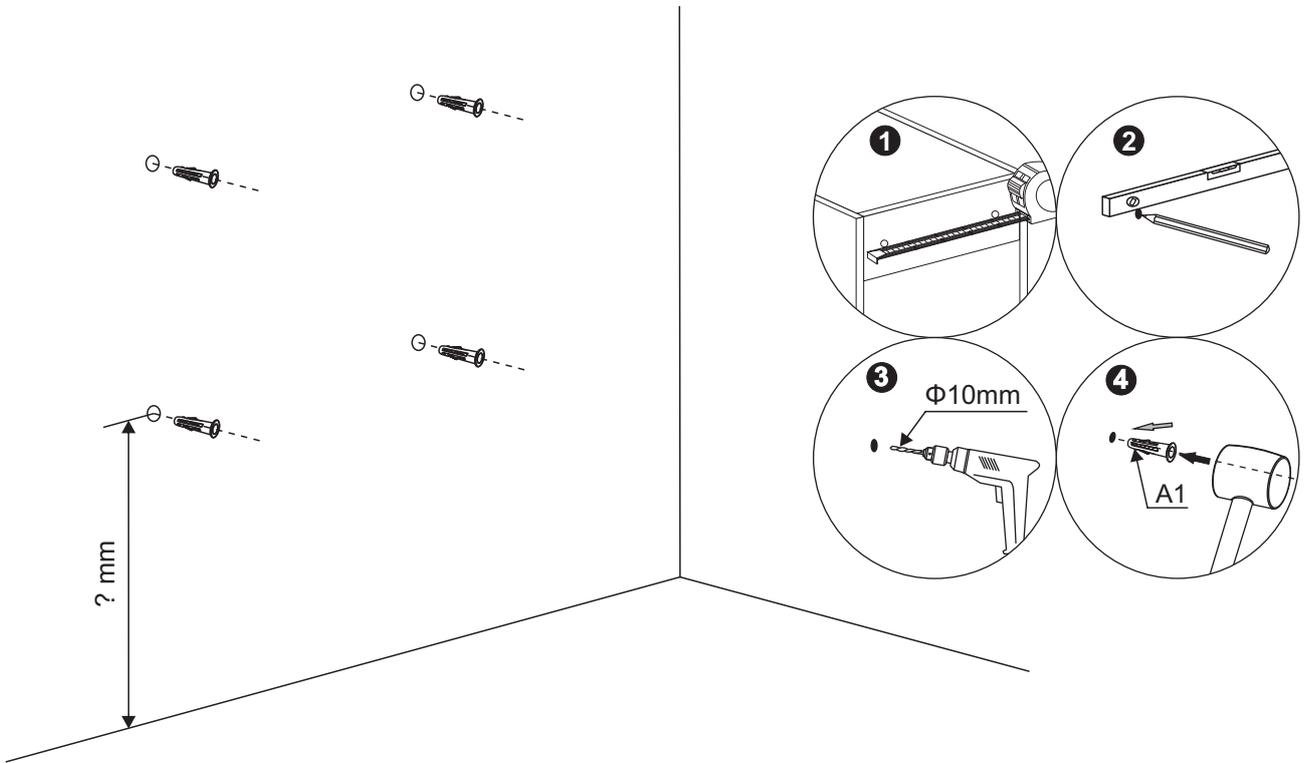


"?" you can adjust as you need.

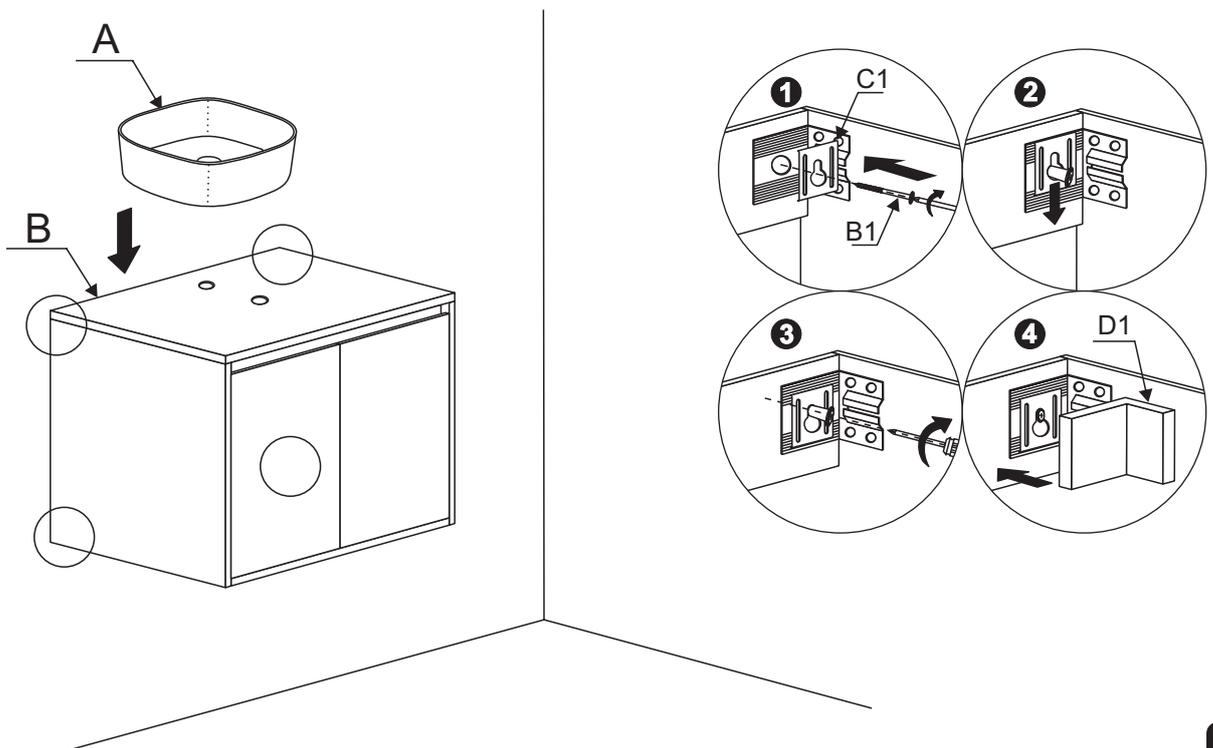


Mirror

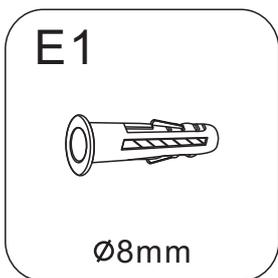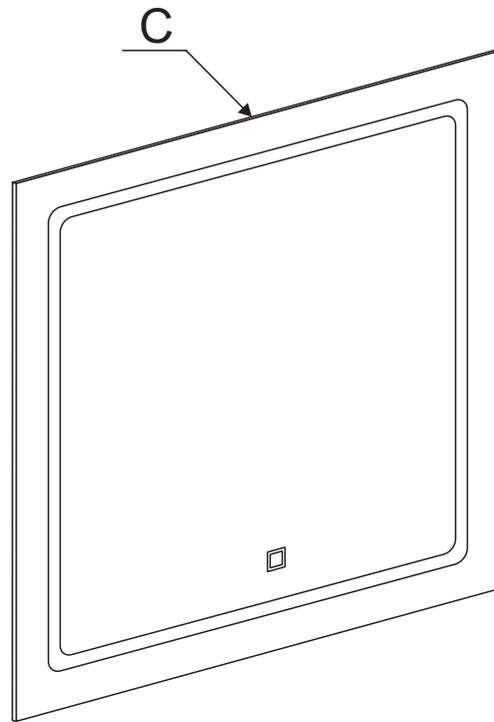

PCS2

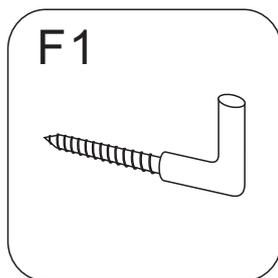

PCS2

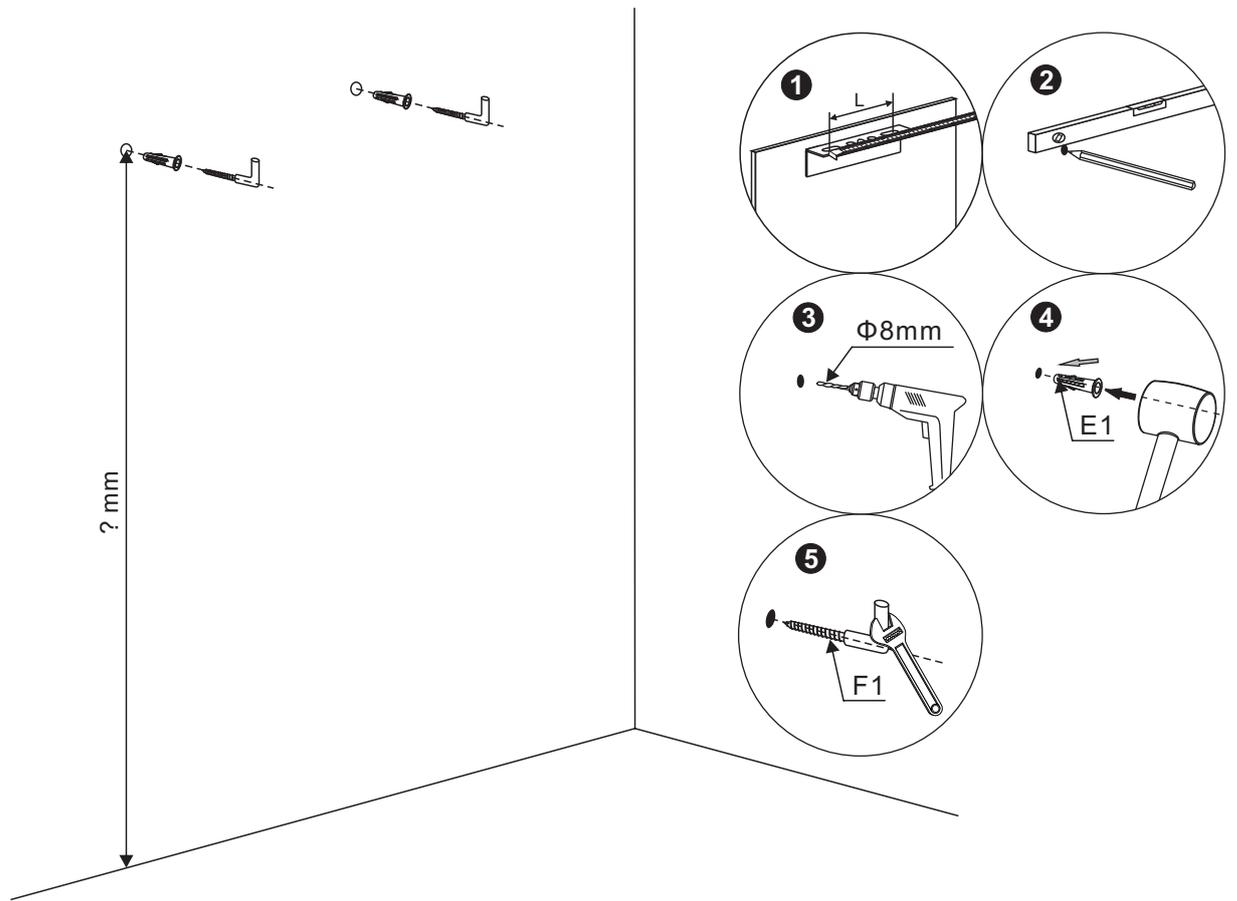

“?” you can adjust as you need.

